


3) For inverted mounting or when reconnecting hoses to condenser coil, the No. 8 hose must be above the No. 6 hose.

NOTE: 1) Be sure to take into account the final mounted position (upright or inverted) of the condenser.

2) For inverted installations, fabricate hose as diagramed below, or purchase hose assembly number RD-2-2655-13P.

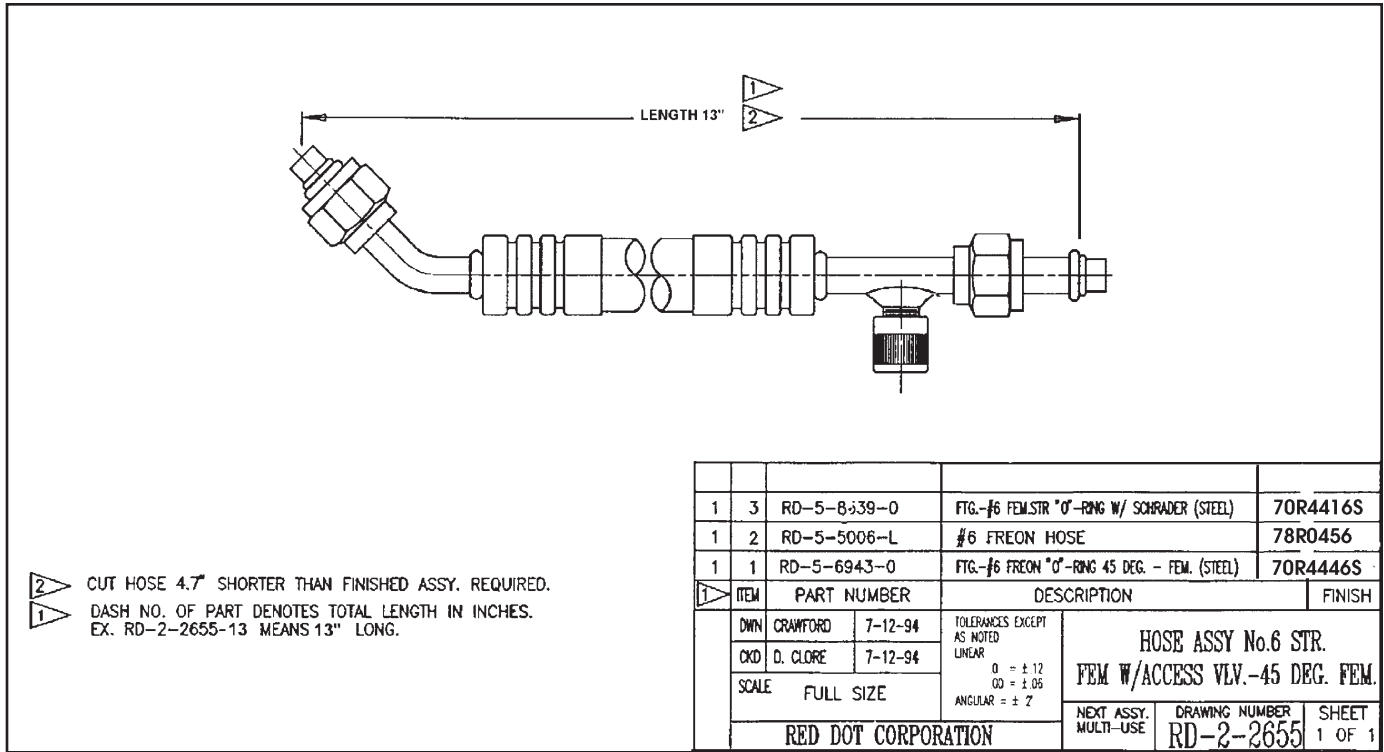

4) When installing the condenser allow a minimum of 3 inches between intake screen and objects that may block air flow.

B) OPTIONAL RECEIVER DRIER KIT INSTRUCTIONS

1) Open condenser cover. Check to see that the No. 6 hose has a service valve on the straight fitting. If not, replace with hose provided.

2) Remove two nuts from front of condenser nearest plumbing side. See Figure 4. Loosen 4 screws attaching plumbing plate to condenser housing. Attach receiver drier bracket using original hardware. See Figure 4.

NOTE: Drier bracket must slide under plumbing plate.