

## BURGA CLIP HOSE FITTINGS


### ASSEMBLY INSTRUCTIONS



1. Cut hose to length, ensuring ends are cut square.




2. Place two proper size clips into the holder. Both clips should have the same orientation. Ear of clip should be on side of holder with flat edge.

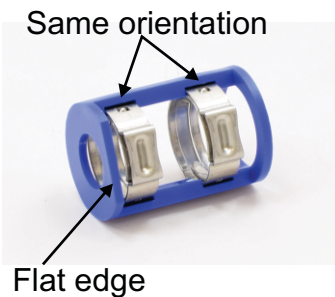

3. Insert hose into clip holder with the clips.

***Important!*** Lubricate, with mineral oil, the outside of the hose where the clips will be. This will ensure the clip will slide when crimping. Failure to lubricate the hose could cause clip to break. This is most critical with #10 hose.

4. Lubricate fitting and insert into hose. Ensure the fitting is fully inserted by checking the gap between the end of the hose and shoulder of the fitting. Also check that the hose is completely in the holder

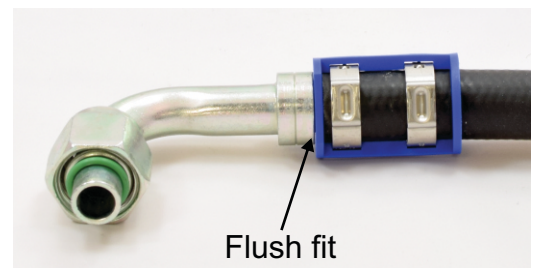

5. Close the clips using the crimping tool (part # 54-11380). The pliers will open themselves when clip is fully crimped. Crimp the clip closest to the fitting first.

